

GasScan™ Series

Model PIDScan-800

World's first fixed VOC gas monitor
with **built-in Self-Cleaning** feature
for low maintenance and costs of ownership



Special Features:

- **Special I**: patented auto-cleaning and auto-zeroing feature to improve operation performance without interruptive maintenance (PCT I App. No.: PCT/SG2010/00004)
- **Special II**: auto-calibration for fast response and uncompromised accuracy, and ease of use
- **Special III**: built-in temperature and humidity sensors for accurate and real-time compensation
- **Special IV**: built-in alarm LED-ring lights for easy of use and cost efficiency
- 4-20 mA analog output ranging from 0.1 to 100 ppm, 1 to 1000 ppm, or 0.01 to 20.00 ppm isobutylene for ultra-sensitive version
- PID sensor highly resistance to humidity interference
- Explosion proof for hazardous application
- With built-in heavy-duty diaphragm pump to draw in sample gas
- Large numerical and graphical dot-matrix display with backlight sensor
- Magnetic interface for non-intrusive operation
- 3 x dry relay contacts: 2 x for alarm, 1 x for fault



Ultra perfection.

Riding on the achievements from legacy of precision
and inner functionality.

GAScan™ Series

Model PIDScan-800

The PIDScan-800 is a permanently mounted volatile organic compound (VOC) monitor, using a Photo-ionization detector (PID) which operates from a 24 Vdc power source, and provides an analogue output of 4 - 20 mA. There are available in full scale range of 100.0 ppm, 1,000 ppm and 20.00 ppm Isobutylene equivalent. Housed in an explosion-proof enclosure, the PIDScan is equipped with a local digital display of the gas concentration and various functional features, such as built-in self-cleaning, dry relay contacts and alarm ring-LED lights.

What is this built-in self-cleaning feature?

Under some environmental conditions, a contaminated sensor can interfere with the performance of the PID detector. To enhance the performance under such harsh conditions, the PIDScan-800 device provides a smart processor to operate a multi-way valve, to control and regulate clean air to flow through the detection chamber. The principle of this apparatus is a cyclic application of clean air to neutralise and flush out the pollution and contamination inside the sensor, so that the sensor is always ready for fresh and accurate measurement. The user can select this mode on the device. The instrument signals the cleaning mode with a separate output.

What is this built-in alarm ring-LED light feature?


The PIDScan-800 series has the option of built-in alarm lights, where a ring of LED lights will lit up in an alarm conditions. Under Alarm 1 condition, the LED ring-lights will flash RED intermittently. Under Alarm 2 condition, they will flash RED permanently. And finally, under Fault mode, the LED ring-lights will flash Yellow permanently; thus showing all the various alarm conditions, yet visible from a distance, without any additional external alarm devices. A sound cost-saving feature, indeed!

Specification:

		PIDScan800 - 1 P/N: PIDScan 800-R1	PIDScan800 - 2 P/N: PIDScan 800-R2	PIDScan800 - 3 P/N: PIDScan 800-R3
PID sensor	10.6 eV (krypton) ; Ceramic electrode discharge lamp	●	●	●
Range/Resolution	0.0 - 100.0 ppm / 0.1 ppm / +/- 2%	●	●	●
Accuracy	0 - 1000 ppm / 1 ppm / +/- 5%	●	●	●
	0.00-20.00 ppm / 0.01 ppm / +/- 2%	●	●	●
	* with Temperature and Humidity compensation on board	●	●	●
Self-cleaning	Built-in self-cleaning	●	●	●
Relay contacts	3 x SPST dry contacts (2 x for alarm ; 1 x for fault)	●	●	●
Ring LEDs Alarm	Built-in ring alarm LEDs; Yellow and Red	●	●	●

Common specification to all:

Response Time	T90 < 30 sec
EX Approval	ATEX II 2G Ex d IIC T6 Gb UL Class I Div I Group B, C and D
IP Rating	IP66
EMI / RFI	Compliance to EMI / RFI Directive 89 / 336 / EEC
Power	9 - 36 Vdc, max. 125 mA at 24 Vdc
Cable	3-wire shielded; max. 1 kOhm at 24 Vdc
Output	4 - 20 mA Modbus RS 485 SPST relay contacts (x2), Fault relay, max. 30 V, 2 A.
Sampling method	Built-in diaphragm pump (~500 ml / min)
Display	Graphic LCD 128 x 64 pixels, with backlit
User interface	Non-intrusive using magnetic key
Operating Cond.	Temperature: -20 degC to +60 degC (-4 degF to 140 degF) Humidity: 0 - 95%RH (non-condensing)
Physical Dim.	Weight: 3.5 Kg Dimension: L 124 x D 125 x H 253 (mm)

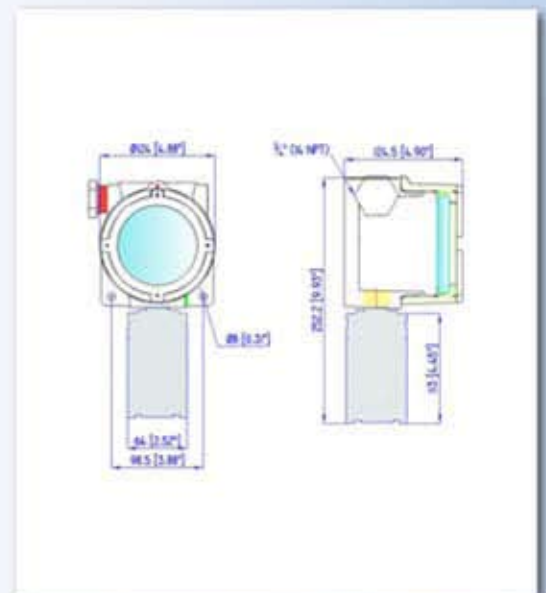

The above specifications are correct as of the time of printing. Subject to changes due to on going product improvements